



Stoeger[®]AIRGUNS

4x32 scope with 2 ring mount

Riflescope operating instructions

Congratulations and thank you for purchasing your new STOEGER SCOPE.

IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS SCOPE. THIS MANUAL SHOULD ACCOMPANY THE SCOPE IN CASE OF CHANGE OF OWNERSHIP.


Be sure that your airgun is not loaded before fitting scope and mount onto the rifle. Always follow safety procedures.

Do not look through the scope at the sun as it may cause permanent damage to your eyes.




Remove upper halves of rings, place one lower part on the airgun rail with stop pin in on model X5 and coming out if you install on model X10. On X10, place the stop pin it in stop notch in the back of the rail. Tighten side screw. Place second lower part in front of the rail. Place scope in cradle formed by both lower halves rings. Slide scope back and forth while looking through the scope eye piece until you have a fully lit field of view.

Be sure to have right distance between your eye and eye piece, around 8cm / 3,1" is standard. Rotate the scope to align the reticle horizontally and vertically. Then replace upper halves of rings and tighten ring screws completely.

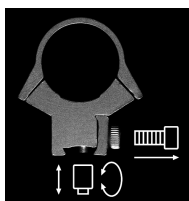

stop pin

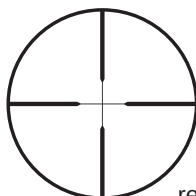

reticle

Adjusting and sighting in:

Since zeroing involves actual shooting of live pellets, it should be done at an approved shooting range. Benchrest the airgun. Remove the windage and elevation caps. Fire 3 pellets at the target which is set at 30yards from where you are shooting:

Point of impact can be adjusted by turning the elevation and windage screws:

- shooting low, turn elevation screw toward “UP”
- shooting right, turn windage screw toward “L”

Taking care of your scope:

When not in use, the scope should be kept in a clean, dry and ventilated place away from any corrosive material.

Never try to take the scope apart or clean internally. Send your scope to qualified service station if it never need repair. Lens surface may be cleaned with lens cloth. Keep lens covered when scope not in use.

Service and Repairs

Contact your dealer for first assistance or the official distributor in your country.
www.stoegerairguns.com: online you will find the distributor list.

Warranty: 2 years from the purchase date for all Stoeger scopes.

Incidental damages, consequential damages to non-manual advices respect and non-authorised disassembling are excluding the scope from the warranty.

Technical specifications

	4x32 scope		2 ring high power mount	
	mm	inch	mm	inch
Length	295	11,6		
Tube diameter	25,4	1	25,4	1
	g	lbs	g	lbs
Weight	290	0,64	60	0,13

USA

Stoeger Industries
17603 Indian Head Highway
Accokeek, MD 20607-2501
+1 301-283-6300
www.stoegerindustries.com

**EUROPE, Canada, Australia-New Zealand
and other countries**

Contact your dealer
or the official distributor in your country
listed on the web
www.stoegerairguns.com